

CLIPPINGS CLEANER

— Instructional Guide —



Keeping your lawn mower deck free of debris is an important part of proper equipment maintenance.

The **Clippings Cleaner** eliminates the awkward, dirty, and time-consuming task of scraping off the deck.

Simply attach the Clippings Cleaner to a standard garden hose and allow water to easily and quickly remove the grass!

[See Instructions](#)


Step 1

Connect the Clippings Cleaner to a standard garden hose.




Step 2

Secure the Clippings Cleaner to the ground with four mounting stakes (provided).

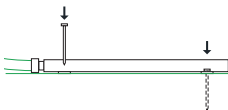


Step 3

Position mower over the Clippings Cleaner with the blades set to the highest setting.

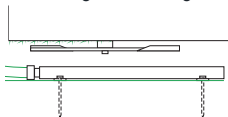


Step 4

Turn on the water.

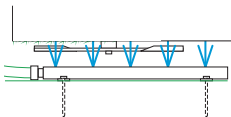


Step 5

Engage the mower blades and move the mower back and forth to clean the deck.

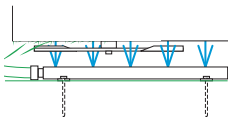

Step 6

After a few minutes, disengage the mower blades, turn off water, and you're done.

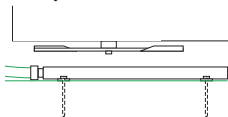

- Use immediately after cutting the grass. Dried clippings are more difficult to remove.
- Ensure the Clippings Cleaner is properly secured to the ground before engaging mower blades.
- Keep the mower deck in the HIGHEST position.
- DO NOT place hands under the mower deck when the engine is running.

Clippings Cleaner LLC
ClippingsCleaner.com
Anoka, MN
ContactUs@ClippingsCleaner.com



Made in USA